

UNCRATING THE MBX BUCKER

This video will show you how to remove the braces to get the bucker out of the shipping crate.

STEP 01.



Remove the screws on the side of the crate with the 'Open This End' label.

STEP 03.



Use the wood panel you removed to act as a ramp to roll the bucker out of the crate.

STEP 02.



Unscrew and remove the 2x4 blocks holding the bucker in place inside the crate.

STEP 04.



That's it! The bucker is now ready to be plugged in and is ready for use